

Battery replacement:

Remove the four screws on the bottom cover to access the battery compartment. If storing the unit for long periods of time the battery should be removed to prevent corrosion of the battery snap. Be sure to place the battery wires along the side of the battery in the battery pocket and use care while replacing the bottom cover.

Warranty:

The FEA Dual Band Compressor-Limiter is fully covered for a period of 5 (five) years and the foot switches are covered for 1 (one) year against defects in material and workmanship. Abuse and neglect are not covered under the warranty. The customer will be responsible for shipping cost to and from FEA Labs for repairs. Contact me before attempting to ship a unit for repair at: info@fealabs.com.

All repairs made outside of the warranty period will be very reasonable (usually only the cost of the parts)... your satisfaction is priority one.


Contact FEA Labs at:

www.fealabs.com

info@fealabs.com

REV 2.0

FEA DUAL BAND OPTICAL COMPRESSOR-LIMITER

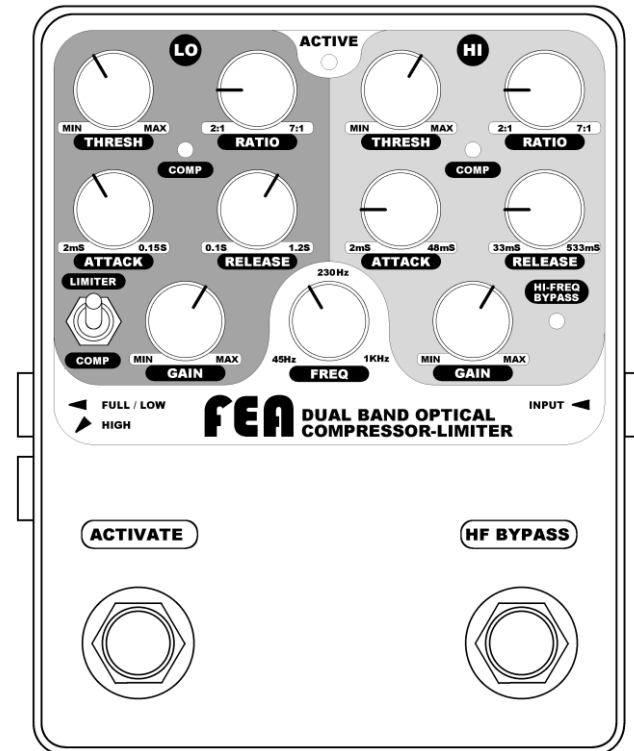

www.fealabs.com

About the design:

Optical compressors are still preferred over VCA (voltage controlled amplifier) compressors in most recording studios for some instruments. One of those instruments where optical is favored is on the bass guitar for its smooth attack and release characteristics.

Optical compressors use a photocell (photo-resistive cell) and a light source projected onto the photocell to vary the value of resistance inversely proportional to the light intensity. Years ago these were made with a discrete photocell and light source. There are now devices that contain both the photocell and light source in a single package. They are referred to as Vactrols and AOI's (analog optical isolators). The drawbacks of these devices in the past have been with their reaction and recovery times. If the photocell were formulated for a quick reaction to light, the resistance would take a long time to settle back after the light has been removed. The opposite is also true; if the photocell were formulated for a quick recovery after the light has been removed then the reaction to light would be slow. The Silonex Company uses a combination formula for the photocell to overcome these limitations in the AOI that is used in the FEA Dual Band Compressor-Limiter. This very same AOI is used in some high-end (i.e. Focusrite and Joemeek) studio compressors for its smooth attack and release qualities. This fast Silonex AOI allows the side-chains in the compressor-limiter to accurately control the Attack and Release times of the compression. The purely resistive element in the AOI exhibits less noise and distortion than most designs using a VCA. Most audiophiles preach that only good quality passive components should be in the audio signal path and this is one application that I would have to agree with them.

Along with these fantastic Silonex AOI's, the FEA Dual Band Compressor-Limiter uses 1% metal film resistors, multi-layer metallized polyester film capacitors, hi-fi quality operational amplifiers in the signal path and laboratory quality coaxial cable for the input signal and direct bypass connections.



The dual rail power supply in the Dual Band Compressor-Limiter is built on an isolated circuit board. The power supply

Technical Specifications:

- Crossover FREQ:** 45Hz to 1KHz
- ATTACK:** HI 2mS to 48mS
LO 2mS to 150mS
- RELEASE:** HI 33mS to 533mS
LO 100mS to 1200mS
- RATIO:** 2:1 to 7:1 LIMITER: ∞:1
- THRESHOLD:** -37dBu to ∞
- Make-up GAIN:** 0 to 20dB
- Maximum Input:** 7.5dBu
- Maximum Output:** 16dBu
- Residual Output Noise:** -66dBu from 10Hz-20kHz (un-weighted) with no compression and output gains set to maximum. ****This is the absolute worst case noise scenario.****
- Frequency Response:** 10Hz – 17KHz +0.5/-3dB
- Input Impedance:** 1M ohm
- Output Impedance:** 1K ohm
- Power adapter noise rejection:** 40dBu @ 60Hz
>90dBu @ 2KHz
- Current Consumption:** Approx. 28mA
- Battery Life:** Approx. 15 hours continuous use
- Power adapter (optional):** 9VDC 2.1mm negative center pin

Min-Max and Limit RATIOS:

Threshold set at -25dB for all tests.

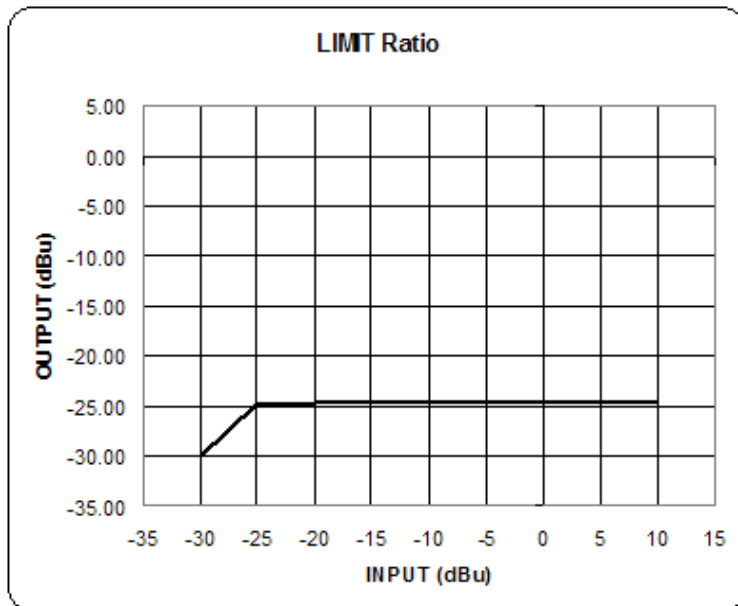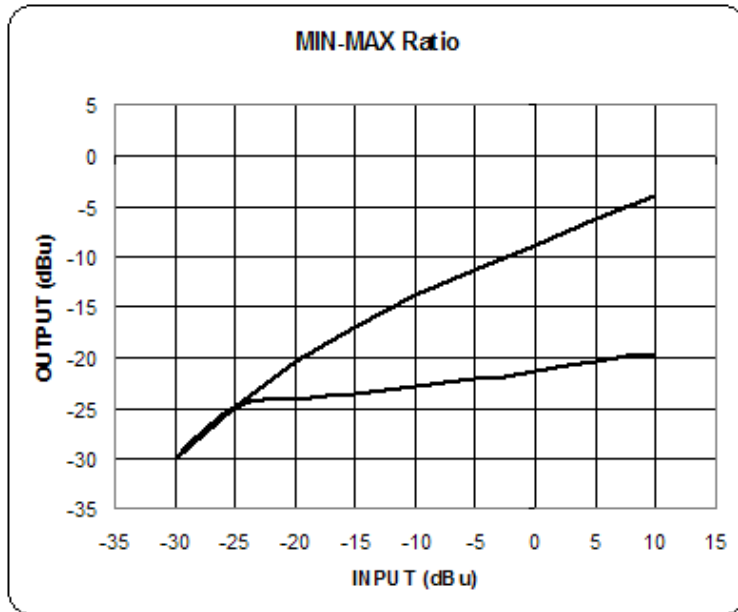

can be powered with 9 to 25V DC and is over filtered two times to assure exceptionally clean power for the signal circuitry. This power supply provides 18Volts (+9V and -9V) to the compressor-limiter circuit board to provide plenty of headroom for the signal. The power supply was designed to provide separate power for all of the side-chain control circuitry. This assures that any natural electrical noise that the compressor-limiter's side-chain control circuitry generates will not bleed into the signal circuitry. I have not seen this approach to power distribution in any of the other manufacturer's guitar effects. Is it overkill? Maybe...but I feel that it is absolutely crucial to eliminate every bit of noise where possible.

The case is a standard Hammond aluminum enclosure. I have tried some of the copies with my prototypes but did not like their quality for a final product. After the Hammond case is machined and sanded it is treated with Aluminum Chromate for corrosion resistance. This is one of the same treatments that the United States military specify for their aluminum panels. The enclosure is then color powder coated, the aluminum faceplate is applied and then the entire case is clear epoxy powder coated for protection.

Frank E. Appleton (FEA)

Features:

- Dual optical compressors for separate Low frequency (LO) and High frequency (HI) dynamics control.
- Adjustable frequency crossover point with the range tailored for bass guitar.
- The frequencies above 5KHz are routed around the compressor circuits and are mixed back into the output amplifiers at unity gain to preserve clarity.
- THRESHOLD, RATIO, ATTACK, RELEASE and GAIN controls for the HI and LO compressors. The control ranges for the ATTACK and RELEASE have been independently optimized for the LO and HI bands.
- Both bands exhibit soft-knee compression at lower RATIO settings and hard-knee at maximum RATIO settings. The COMP LED indicates when the THRESHOLD has been reached. This LED does not indicate the RELEASE response.
- The LIMITER switch changes the LO band compressor into a LO band limiter. The LO RATIO control is bypassed and hard limiting is applied and set by the THRESHOLD level control.
- The compressor-limiter side-chains use precision full-wave rectification of the audio signals in the THRESHOLD circuits to improve tracking. This also reduces the possibility of “pumping” with very low frequencies.
- HI BYPASS foot switch. This allows the compressor-limiter to only control the Low frequencies (if desired) and to pass the High frequencies to the outputs unaffected. There is a red LED to indicate the HF BYPASS is on. NOTE: With HI BYPASS active the HI GAIN control is inactive.
- ACTIVATE foot switch places the compressor-limiter unit in the signal chain or in Direct Bypass mode. In Direct Bypass mode the signal at the input is directly connected to the outputs with laboratory quality coax cable and does not pass through any electronics. The audio signal is sent through coax cable to assure the cleanest and most noise free connection possible.
- The compressors have minimal components in the signal paths to maintain the utmost signal quality. The signal compression-limiting is accomplished with only resistive components (Light Dependent Resistors or Photocell). All resistors in the circuit are low noise 1% metal film type. The signal coupling capacitors are tight tolerance, quiet, multi-layer and metallized polyester film type. The amplifiers used in the signal path are JFET input, low-noise, low-distortion “hi-fi quality” devices.
- The power supplies onboard voltage charge pump allows the circuitry to operate at 18volts (+9 and -9 volt rails) from a single 9-volt battery or AC power adapter of 9 volts or greater. This allows the signal plenty of headroom from active electronic guitars and aggressive playing techniques (i.e. pop and slap).
- The onboard power supply can accommodate power adapter voltages up to 25 volts DC with protection from reversed polarity. The “switch on” power supply current is less than 1 μ A (micro amp) on the signal ground at the INPUT jack. This is approximately 45,000 times (-93dB) less than the commonly used method of connecting the battery’s negative terminal to ground via the sleeve of the plug inserted into the INPUT jack. The “switch on” sensing method used in the FEA Dual-Band Compressor-Limiter keeps nearly all of the circuit’s generated white noise and transient currents out of the INPUT stage signal ground. Extreme measures have been taken to keep the power and signal paths as clean as possible. NOTE: Unplug the cord from the INPUT jack when not in use to prolong battery life.
- The power and grounds for the signal path circuitry are separated from the side-chain power and grounds to protect the audio signal from spurious noise. The power for the signal amplifiers is exceptionally clean, filtered twice for each rail and all filter stages are oversized.
- HI and LO/FULL output jacks are configured so the outputs of the individual compressors may be routed to different amplifiers or effects. The HI output is useful if you wish to use effects made strictly for guitar and route a clean LO signal to another amplifier or mixer. If only the LO/FULL output jack is used, both the HI and LO signals are mixed together for a composite full range output signal.